

Owner's Instructions



Models INSCG92511, LCG92512

Performance Series Electronic Preset Meter Parts and Technical Service Guide

IMPORTANT!!!

This manual contains important warnings and information.

READ AND KEEP FOR REFERENCE.

Factory Settings

Each meter is preprogrammed and calibrated at the factory. Unless otherwise specified at the time of the order, each meter is programmed in quarts for use with motor oil. The meter is shipped in the Manual Mode. If you need to change the factory settings, see page 6.

1000 psi (67 bar) Maximum Working Pressure 8 gpm (30 Lpm) Maximum Flow Rate

This Meter is designed specifically to dispense motor oils (S.A.E. 5-50), gear oils (S.A.E. 80.240), automatic transmission fluid, antifreeze (Ethylene Glycol) solution, and hydraulic fluid. This meter is NOT designed to dispense brake fluid, or windshield wiper fluid.

SYMBOLS

⚠ WARNING

This symbol is an alert to the possibility of serious injury or death if the instructions are not followed.

⚠ CAUTION

This symbol is an alert to the possibility of damage to or destruction of equipment if the instructions are not followed.

⚠ WARNING

Equipment Misuse Hazard

1. This equipment is for professional use only.
2. Read all instructions, tags, and labels before operating the equipment.
3. Use the equipment only for its intended purpose.
4. Do **NOT** modify or alter the equipment.
5. Do **NOT** leave equipment unattended while dispensing.
6. Check equipment daily. Repair or replace worn or damaged parts immediately.
7. Do **NOT** exceed the maximum working pressure level of the lowest rated system component.
8. Use only extensions and nozzles that are designed for use with this equipment.
9. Use only fluids and solvents that are compatible with the equipment. Read all fluid and solvent manufacturer's warnings.
10. Tighten all fluid connections before operating this equipment.
11. Do **NOT** stop or deflect leaks with hands, body, gloves, or rags.
12. Do NOT dispense valves towards any person or any part of the body.
13. Do NOT place hands or fingers over the end of or into the dispense valve.
14. Comply with all local, state, and federal fire, electrical, and safety regulations
15. Use of this product in a manner other than specified in this manual may result in impaired operation or damage to equipment.



Keypad Buttons



In Auto and Programming Mode, used to enter the quantity to be dispensed.

History

Used to scroll through the five previous batches during the normal operating mode.

Flow Rate

Used to indicate the rate of flow while the fluid is being dispensed.

Total

Used to display the accumulated total of fluid, as well as the resettable total during normal operating mode. Used to scroll through the menu options in the auto mode.

Auto

Used to enter and exit the auto mode to program batch types and sizes.

Reset

Used in normal operating mode to clear the previously programmed batch and to reset the meter. Used to reset the resettable total after pressing the TOTAL button. Used to advance through the programming screens in the programming mode.

Shut-Off

Used to stop the flow through a mechanical override.

Installation

Pre-Installation Procedure

1. Relieve the system pressure:

- a. Turn off the power supply to the pump or close the shutoff valve.
- b. Dispense any fluid in the system into a waste container by opening the dispense valve.
- c. Open all bleed-type master air valves and fluid drain valves in the system.
- d. Leave the drain valve open until ready to pressurize the system.

2. Close the shutoff valve.

3. Ground hoses and reels:

Grounding reduces the risk of static sparking; ground all system components according to local, state, and federal code. Consult the user's manual of the pump and other system components to ground the following:

- i. Pump: follow manufacturer's recommendations
- ii. Air and Fluid Hoses: use only grounded hoses
- iii. Air Compressor: follow manufacturers recommendations
- iv. Fluid Supply Container: Follow the local code

⚠️ WARNING


Do not use Teflon® tape on pipe joints; it may cause a loss of grounding across the joint.

Installation Procedure

1. If this is an existing installation, go directly to step 6. Steps 2 through 5 are for flushing the system prior to installing the meter.
2. Close fluid dispense valves at every dispense position.
3. Once the main fluid outlet valve at the pump is closed, the air pressure to the pump motor is properly adjusted, and the air valve is open, slowly open the main fluid valve.
4. Place the hose end in a waste container. Make sure hose is secure so no fluid will leak during flushing.
5. Slowly open the dispense valve and allow enough oil to pass through to ensure that the system is clean. Close the valve and repeat for all dispense positions.

Note: If the system has multiple dispense positions, begin at the position farthest from the pump, and move towards the pump.


6. Relieve the Pressure (see Relieve the System Pressure, above).
7. Insert the metal end of the hose into the swivel located at the end of the handle, and tighten completely with an open ended, adjustable wrench.

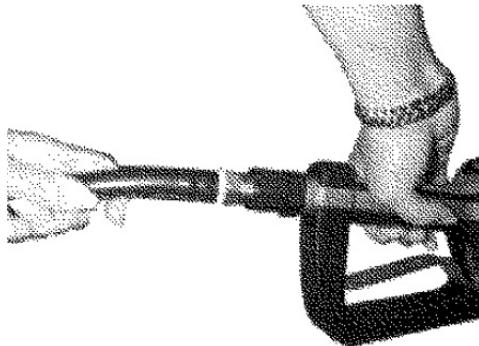

Attaching the hose

Note: The threaded end of the meter will always have female threads, so the metal end of the hose must have male threads. Apply thread sealant to the mate end. The inlet and outlet connections are both 1/2" NPT or 1/2" BSPP depending on meter model.

8. Thread the new nozzle onto the opposite end of the meter and screw in tightly with an open ended, adjustable wrench.
9. Open all dispense position shut-off valves, and start the pump to pressurize the system.
10. To ensure accuracy, purge all air from the fluid lines and dispense valve before use.

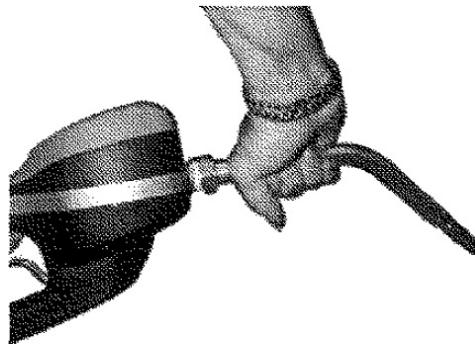

Installing the nozzle

Accessories for Inline Oil Control Guns

Use Model #'s Below for Replacement Orders




Model LCGA9050

3/8" MNPT angled rigid extension with manual non-drip nozzle.



Model LCGA9041

1/2" MNPT flexible extension with manual non-drip nozzle.

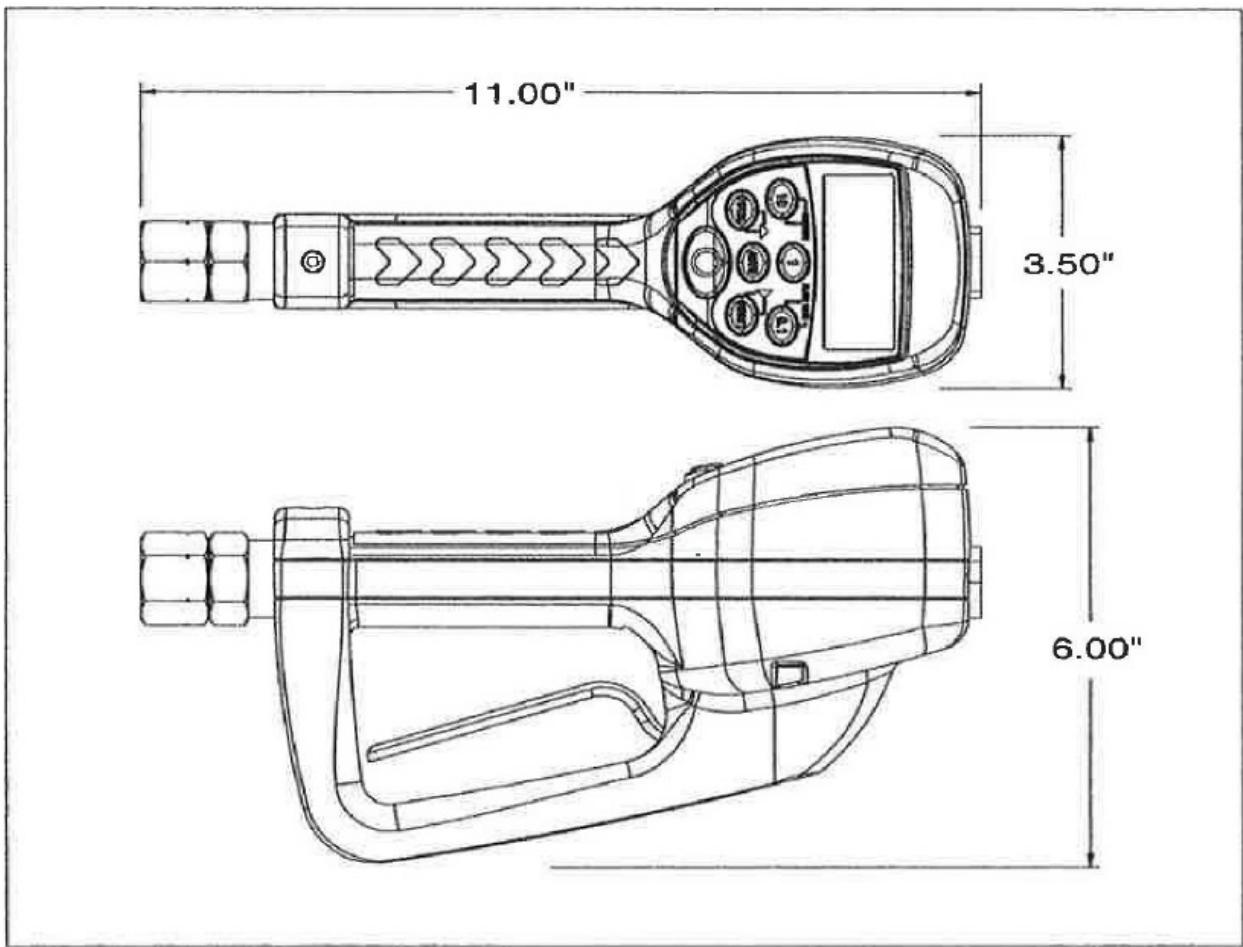

SPECIFICATIONS

	English	Metric
Maximum Flow*	8 gpm	30 lpm
Minimum Flow*	0.25 gpm	1 lpm
Operating Pressure (Maximum)	1000 psi	67 bar
Operating Pressure (Minimum)	5 psi	.35 bar
Operating Temperature (Maximum)	120° F	50° C
Operating Temperature (Minimum)	20° F	-5° C
Accuracy (Non-Approved Version)	+/- 0.5%	+/- 0.5%
Accuracy (Approved Version)	+/- 0.4%	+/- 0.3% (1 to 10 lpm)
5-Digit LCD Display, 10 mm High x 5 mm Wide	Quarts, Pints, Gallons	Liters
Inlet and Outlet Connections	1/2" NPT	1/2" BSPP

*Tested with DTE-25 motor oil at ambient temperature. Min.-Max. flow range will vary with fluid viscosity.

Meter Operation

NOTE: The keypad Auto button is used to toggle between Manual Mode and Auto Batch Mode.

Manual Mode

In the Manual Mode the meter operates as a free flow-dispensing handle



Manual Mode

1. Pull the trigger to begin the flow.
2. The display shows the amount dispensed.
3. When the desired amount has been dispensed, release the trigger to stop the flow.
4. Press **RESET** button once to reset the counter display to zero.

Auto Batch Mode

To enter the Auto Batch Programming Mode, press the **AUTO** button until a digit and colon appear.

This screen appears.



Auto Batch Program Mode

The meter is now ready to select the desired batch number.

- The '0' is flashing in front of the colon. This is the batch number icon.
- Batch '0' is for Manual Mode. (See Manual Mode, above.)
- Batches '1' through '5' are for auto batching amounts up to 99 units.
- Different batch amounts can be stored in each option.
- Batch '6' is for batches between 1 and 999 units.

1. Press the **TOTAL** button to cycle through the batch number icons to select the desired batch or manual mode.

2. When the desired batch number icon appears on screen, change the batch size by pressing the **10**, **1**, and **0.1** buttons.



Auto Batch Program Mode, option 1

- Press the **10** button to increase a batch by 10 units.
- Press the **1** button to increase a batch by 1 unit.
- Press the **0.1** button to increase a batch by 0.1 of a unit.



Auto Batch Program Mode, option 6

NOTE: When programming option 6:
• press the **10** button to increase a batch amount in increments of 100 units
• press the **1** button to increase a batch amount in increments of 10 units
• press the **0.1** button to increase a batch amount in increments of 1 unit

NOTE: See Count Up/Down Mode Specifications section of this manual.

3. After the batch size is selected, press the **AUTO** button

button to lock in the batch and dispense fluid.

4. Pull the trigger to begin the flow.

- The solenoid valve, in the meter, automatically locks the dispensing valve in the full open position.



CAUTION

The meter always locks in the maximum open position.

5. Release the trigger, allowing it to fall back.

6. The flow automatically shuts off after the batch quantity has dispensed.

7. After the batch quantity has been dispensed the meter is a free flow-dispensing handle until the reset button is depressed.

NOTE: In case of an emergency or to interrupt a batch, the meter is equipped with an Emergency Override. (See the Emergency Override section of this manual.)

8. The user has the option to top off the fluid at the end of a batch.

- To top off the fluid, pull the trigger to begin the flow and release it when the desired amount has been pumped.

9. Press the

b) **RESET** button when finished. The display resets and the meter is now ready to dispense the next batch.

Count Up/Count Down Modes

1. When in the Auto Batch Programming Mode, press the **RESET** button and the count up/count down arrows flash in the display.



Count Up Arrow

- Press the **TOTAL** button to toggle between count up/count down.
- Press the **RESET** button to select count up or count down.



Count Down Arrow

NOTE: In the count up option the meter counts up to the preprogrammed batch amount.

In the count down option the meter counts from the programmed batch amount down to zero.


Batch number 6 is always in the count down mode.

2. Press the **AUTO** button to lock in the batch quantity when batch size is selected. The screen flashes and the batch number icon no longer displays.



Count Up Mode

- If the meter is in count up mode, the display shows zeros.

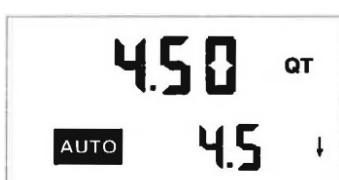

Count Down Mode

- If the meter is in the count down mode, the desired batch size appears on the screen.

OPERATING MODE FUNCTIONS

These functions operate the same in Manual Mode and Auto Batch Mode.

Re-settable/Accumulated Totals

The meter has two flow totalizers. One is Re-settable Total. The other is Accumulated Total.

1. To see the Accumulated Total and the Re-settable Total:

- Press and hold the **TOTAL** button to see the Accumulated Total.
- Continue holding the **TOTAL** button
- After three seconds the screen changes to the Re-settable Total.



Re-settable Total

2. Resettotals displays the total fluid dispensed since the Resettable Total was last set back to zero.

3. Press the **RESET** button while viewing Resettotals to set it back to zero.
4. Release the **TOTAL** button to return to the operating screen.

NOTE: The Accumulated Total cannot be reset unless the user changes from English units to metric units or from metric to English units. (See the Change Factory Settings section of this manual).

Emergency Override

In case of an emergency or to interrupt a batch, the meter is equipped with an Emergency Override.

1. Press the red  button on the meter to activate the Emergency Override. The override closes the valve, immediately stopping fluid flow.
2. After an Emergency Override, batching can continue by pulling up on the trigger.

History

This option allows the user to review the previous five (5) batches dispensed with the meter.

1. Press and hold the  10 /HISTORY button to view the five (5) previous batches.



History option

- The batches are displayed on screen, one at a time; beginning with the most recent and cycling through to the oldest.
- The batches continue to cycle as long as the History button is held down.

2. Two (2) seconds after releasing the History button the display automatically returns to the normal operating screen.

NOTE: The HISTORY cannot be erased unless the user changes from English to metric or from metric to English units. (See the Change Factory Settings section of this manual.)

Flow Rate

This option allows a user to see instantaneously the rate at which fluid is flowing through the meter.

1. Press and hold the  0.1 /FLOW RATE button while fluid is flowing through the meter. The Flow Rate appears in the bottom right hand corner of the display.



Flow Rate option

- As long as the button is held down, the Flow Rate remains on the display.
- Releasing the button returns the display to the normal operating screen.

NOTE: The Flow Rate can only be displayed if fluid is flowing through the meter.

Error Codes

SFO (Scale Factor 0) The Scale Factor setting for the meter is set to 0.000.

- To input a valid Scale Factor for the meter follow the instructions in the Change Factory Settings section of this manual.


All other Error Codes are for factory purposes only.

- To clear the meter, press Reset.

SERVICE

Low Battery

When the batteries need changing a progression of warnings appear on the meter screen

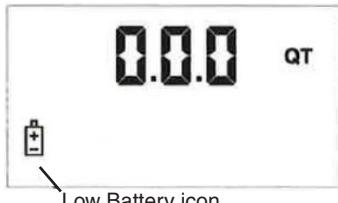

Low Battery icon

First Warning: the Low Battery icon appears in the lower left corner of the display. That means the batteries are low and need changing.


Second Warning: Battery icon flashes. The battery power is too low and meter functions are disabled.

Changing the Batteries

The battery compartment is located in the lower case on the underside of the trigger guard.

1. Turn the unit over.
2. Unscrew the two screws. Remove the battery door to expose the batteries.
3. Replace the old batteries. The meter takes 4 AA, alkaline, batteries.

NOTE: Battery polarity markings are inside battery compartment.

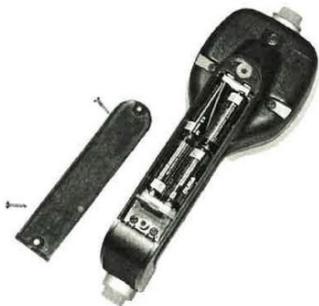

4. Dispose of used batteries properly, according to local regulations.

NOTE: Changing the batteries does not affect any of the programmed values or totals.

CHANGE FACTORY SETTINGS

Each meter is calibrated at the factory for use with motor oil (see the Change Scale Factor section of this manual). The Unit of Measure is also selected prior to shipment.

Verify Firmware Version

1. The firmware version and code checksum can be displayed by holding the **TOTAL** and **AUTO** buttons at the same time.
2. The last two digits on the lower right are the firmware version.
3. Meters with version 17 or higher use the procedure outlined in this manual for changing of unit of measure and scale factor.

Programming


To change the factory settings:



1. Push and hold at the same time the **TOTAL** and **AUTO** buttons.
2. PrG will appear on the display.
3. Release the **TOTAL** and **AUTO** buttons.
4. Then press and release in order the **1**, **AUTO**, **10**, **0.1** and the **TOTAL** buttons.
5. The current unit of measure will now be flashing indicating that you have entered the programming mode.

Change Units of Measure

The meter comes with an option to choose 4 different Units of Measure.

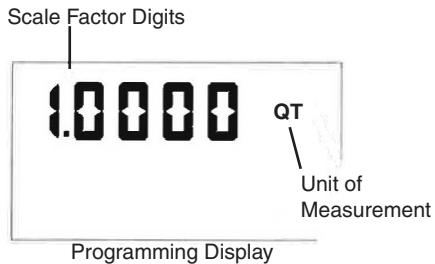

1. The actual Unit of Measure is flashing when the Programming Mode is entered.
2. Press the **TOTAL** button to toggle between the four options; PT, QT, GAL, L.
3. When the desired unit of measure is displayed, press the **RESET** button. The Unit of Measure icon stops flashing.

4. If L, (Liters), is selected, the decimal point begins to flash.
 - You now have the option to change the decimal point to either a period or a comma.
 - To do this, press the **TOTAL** button.

5. If no Scale Factor changes are necessary, refer to the Save Changes section of this manual.

CAUTION

Changing the Unit of Measurement from metric to English or from English to metric clears the Re-settable Total and Accumulated Total.

Change Scale Factor

WARNING

Changing the Scale Factor changes the accuracy of the meter, potentially causing it to overfill or under fill. This has the potential to cause a mechanical breakdown.



Scale Factor Display

Scale Factor Digits

1. Press the **RESET** button to advance through the Scale Factor digits.

2. Press the **TOTAL** button to change the selected number.

NOTE: All digits can be scrolled between 0 and 9 except the first. It can only be scrolled from 0 to 1 or from 1 to 0.

3. Press the **RESET** button to advance to the next number 1n Scale Factor.

4. Repeat steps 2 and 3 for all five digits in Scale Factor.

Save Changes

To Save Changes and exit the programming mode:

1. Push and hold at the same time the **TOTAL** and **AUTO** buttons.

2. The display will flash 3 times and go blank.

3. Press the **RESET** button and the display will turn back on.

Verify Changes

1. Verify Unit of Measure is correct.

2. Push and hold the Total button and Auto button together, to verify that the Scale Factor is correct.

CALCULATE SCALE FACTOR

A Scale Factor is a number used to adjust meter accuracy. The Scale Factor is set at the factory using motor oil with a viscosity of 10W.

The primary use for Scale Factor recalibration is to batch fluids with different viscosities. If the fluid has a lower viscosity, more fluid can slip past the meter gears without being detected. Changing the Scale Factor adjusts the meter to compensate for the loss.

The meter multiplies each pulse by the Scale Factor number to correct the accuracy when it converts to the specified units. The reading is then always correct.

For an approximate Scale Factor for fluids of different viscosities, consult the charts on the next page.

NOTE: The meter's original Scale Factor was written on the trigger when it was calibrated at the factory. It may have been revised after field installation. Use the Scale Factor showing on the display, not on the trigger.

WARNING

Changing the Scale Factor will change the accuracy of the meter, potentially causing it to overfill or under fill. This has the potential to cause a mechanical breakdown.

To view the current Scale Factor:

1. Press and hold the **TOTAL** button and the **AUTO** button at the same time.


Absolute Scale Factor

For absolute Scale Factor, perform this test:

1. Run a measured amount of fluid through the meter.
2. If the meter delivers 4.20 quarts and the display shows only 4.00 quarts, then the Scale Factor needs to be adjusted.
3. Divide what the meter delivered (4.20) by what the display shows (4.00). You get an error factor of (1.05).
4. The existing Scale Factor is 1.0123, as shown in steps 1 and 2 in "To view the current Scale Factor", above.
5. To calculate a new factor: 1.0123 (existing Scale Factor) x 1.05 (error factor)= 1.0629 (new Scale Factor).
6. Enter that number as described in the Change Scale Factor section of this manual.

NOTE: Use the Scale Factor showing on the display, not on the trigger.

Chart of approximate Scale Factors for fluids of different viscosities

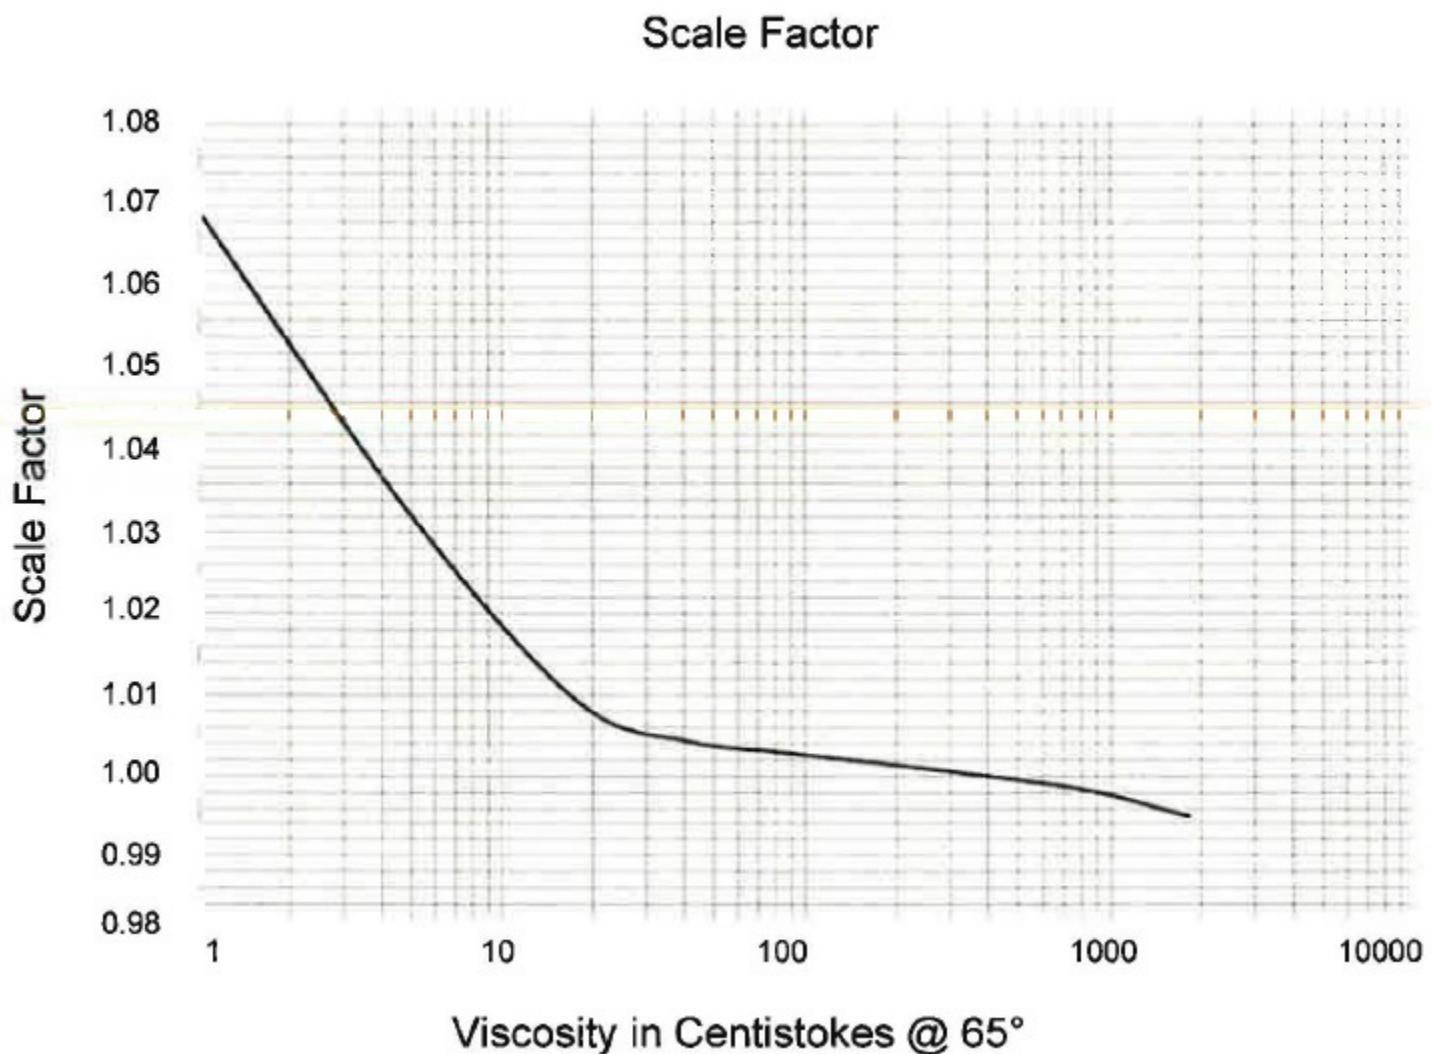

Samples of Fluids, Viscosities and Scale Factors

	Fluid	Viscosity	Scale Factor
1	Water/Anti Freeze	5	1.044
2	Anti-Freeze	18	1.007
3	Brake Fluid	42	1.004
4	ATF	80	1.002
5	10W	140	1.000
6	80W-90	450	0.999
7	140W	1800	0.993

Replacement Part #	Description
RP008142	Replacement PCB w.display, for LCG92511 & LCG92512

FIVE YEAR LIMITED WARRANTY*

LEGACY MANUFACTURING COMPANY ("LEGACY") warrants that this equipment will be free from defects in material and workmanship for a period of five (5) years from the date of purchase, under normal use: LEGACY'S sole obligation under this warranty is limited to replacing or repairing, free of charge, any equipment that proves to be defective under normal conditions and use according to the recommendations of LEGACY. To obtain repair or replacement, the equipment must be shipped to a LEGACY authorized Warranty and Service Center during the warranty period, transportation charges prepaid, with proof of date of purchase. In the event of repair or replacement, the warranty period shall not be extended beyond the original warranty period.

This warranty is extended to the original purchaser only and is not transferable. This warranty does not apply to normal wear items such as packings, seals, tips and filters, or to equipment damaged from accident, overload, abuse, misuse, negligence, faulty installation or abrasive or corrosive materials, or to equipment repaired or altered by anyone not authorized by LEGACY to repair and alter equipment. No allowance will be granted for any repairs or alterations made by a purchaser without LEGACY'S prior written consent.

LEGACY WILL BEAR NO OTHER EXPENSE, INCLUDING BUT NOT LIMITED TO LABOR AND MATERIAL COSTS (OTHER THAN THOSE SPECIFIED HEREIN) OF ANY KIND, AND YOUR EXCLUSIVE REMEDY, IN LIEU OF ALL INCIDENTAL, SPECIAL, CONSEQUENTIAL OR ANY OTHER DAMAGES, INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR NEGLIGENCE, IS LIMITED TO REPAIR OR REPLACEMENT AS HERETOFORE DESCRIBED. THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED OF ANY KIND REGARDING ANY EQUIPMENT, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE. IN NO CASE SHALL LEGACY BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES BASED UPON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY, OR ANY OTHER LEGAL THEORY.

Unless modified in a writing, signed by both parties, this Limited Warranty is understood to be the complete and exclusive agreement between the parties, superseding all prior agreements, oral or written, and all other communications between the parties relating to the subject matter of this Limited Warranty. Any action for breach of warranty must be commenced within twelve (12) months following the end of the warranty period.

*If this equipment contains a hose, the hose is warranted for ninety (90) days only. The remaining portions of this equipment are warranted for five (5) years, as described above. While necessary maintenance or repairs on your Legacy equipment can be performed by any company, we recommend that you use only authorized Legacy service centers. Improper or incorrectly performed maintenance or repair voids this warranty. Contact us at service@legacymfg.com or www.legacymfg.com for ordering, Installation instructions.

GARANTIA LIMITADA A CINCO AÑOS*

LEGACY MANUFACTURING COMPANY ("LEGACY") garantiza durante un periodo de cinco (5) años a partir de la fecha de adquisición, y bajo condiciones normales de uso, que este equipo no tiene ningún defecto en sus materiales y mano de obra: La única obligación de LEGACY según esta garantía se limita a sustituir o reparar, sin coste alguno, cualquier equipo que se haya comprobado estar defectuoso bajo condiciones normales de uso según las recomendaciones hechas por LEGACY. Con el fin de reparar o substituir dicho equipo, el equipo deberá ser enviado a un Centro de Servicio y Garantía LEGACY autorizado durante el periodo de vigencia de la garantía, el coste de los fletes pagados, acompañado del comprobante de compra con la fecha de adquisición. En caso de una reparación o substitución, el periodo de garantía no deberá extenderse más allá del periodo original de su vigencia.

Esta garantía se extiende solamente al adquiriente original y no es transferible. Esta garantía no le será pertinente a los artículos que normalmente se desgastan como lo son los empaques, sellos, casquillos y filtros, ni al equipo dañado a consecuencia de un accidente, sobrecarga, abuso, mal uso, negligencia, instalación defectuosa o los efectos de materiales abrasivos o corrosivos, ni al equipo reparado o modificado por cualquier persona ajena no autorizada por LEGACY para reparar o alterar dicho equipo. No se le otorgará ninguna concesión por concepto de ninguna reparación o alteración hecha por el adquiriente sin el previo consentimiento por escrito de LEGACY.

LEGACY NO SERÁ RESPONSABLE DE NINGUN OTRO GASTO, QUE INCLUYA MAS NO SE LIMITE A LOS COSTOS DE MANO DE OBRA Y MATERIALES (A EXCEPCION DE AQUELLOS ESPECIFICADOS EN LA PRESENTE) DE NINGUNA CLASE Y SU REMEDIO, COMO RESULTADO DE TODO DANO INCIDENTAL, ESPECIAL, CONSECUENCIAL O DE CUALQUIER OTRA INDOLE, QUE INCLUYE, MAS NO SE LIMITA A LOS DANOS POR NEGLIGENCE Y SE LIMITARA A REPARARLO O SUBSTITUIRLO COMO SE HA DESCrito Y DESCRIBIRA ANTERIORMENTE Y MAS ADELANTE. LAS GARANTIAS VIGENTES SUBSTITUYEN CUALESQUIERA OTRAS REPRESENTACIONES O GARANTIAS, EXPRESADAS O IMPLICITAS DE CUALQUIER INDOLE RELACIONADAS CON CUALQUIER EQUIPO, QUE INCLUYE, MAS NO SE LIMITA A LAS GARANTIAS IMPLICITAS EN SU MERCADOTECNIA Y ADECUACION PARA UN PROPOSITO O USO EN PARTICULAR. BAJO NINGUNA OTRA CIRCUNSTANCIA LEGACY SERÁ RESPONSABLE DE CUALESQUIERA DANOS ESPECIALES, INCIDENTALES O CONSECUENCIALES TOMAN DO COMO BASE EL INCUMPLIMIENTO DE LA GARANTIA, INCUMPLIMIENTO DEL CONTRATO, NEGLIGENCE, RESPONSABILIDAD ESTRICTA, O CUALQUIER OTRA TEORIA JURIDICA.

Salvo que se modifique por escrito y firmado por ambas partes, esta garantía limitada deberá interpretarse como un convenio completo y exclusivo entre las partes, invalidando todo convenio previo, ya sea expresado o por escrito, y cualesquier otras comunicaciones entre las partes que estén relacionadas con el asunto sujeto a esta garantía limitada. Cualquier acción o incumplimiento de la garantía deberá darse por iniciada(o) dentro de los doce (12) meses posteriores al término del periodo de la garantía.

*Si este equipo está equipado con una manguera, la vigencia de la garantía de la manguera será solamente de noventa (90) días. El resto de los componentes de este equipo se garantizan durante cinco (5) años, como se indica anteriormente. Comuníquese con nosotros a service@legacymfg.com o www.legacymfg.com si desea obtener instrucciones para pedidos e instalaciones.

GARANTIE LIMITEE DE CINQ ANS*

La société LEGACY MANUFACTURING COMPANY (« LEGACY ») garantit que, dans des conditions normales d'utilisation, ce matériel sera exempt de vice de matière et de fabrication pour une période de 5 (cinq) ans à partir de la date d'achat. En vertu de la présente garantie, la seule obligation de la société LEGACY se limite à remplacer ou à réparer gratuitement le matériel se nivellant détectueux à la suite d'une utilisation normale, effectuée dans des conditions normales et conformément aux recommandations de la société LEGACY. Pour toute réparation ou remplacement, le matériel doit être expédié pendant la période de garantie à un centre de service sous garantie agréé par la société LEGACY et doit accompagner d'une preuve de la date d'achat, les frais de transport ayant été prépayés. En cas de réparation ou de remplacement, la période de garantie n'est pas prolongée au-delà de la période de garantie initiale.

La présente garantie ne s'applique qu'à l'acheteur original et n'est pas transférable. La présente garantie ne s'applique pas aux éléments sujets à une usure normale, tels que les garnitures, les joints, les embouts et les filtres, ni au matériel endommagé à la suite d'un accident, d'une surcharge, d'une utilisation abusive, d'une utilisation incorrecte, de négligence, d'une installation incorrecte, de l'action de matières abrasives ou corrosives, ni au matériel réparé ou modifié par qui que ce soit non agréé par la société LEGACY pour la réparation et la modification du matériel. Aucune indemnité ne sera prise en compte pour une réparation ou modification effectuée par un acheteur en l'absence d'une autorisation écrite préalable de la société LEGACY.

LA SOCIETE LEGACY NE SERA SUJETTE A AUCUNE AUTRE DEPENSE DE QUELLE SORTE QUE CE SOIT, Y COMPRIS ET SANS CE CETTE LISTE SOIT LIMITATIVE, AUCUN FRAIS DE MAIN-D'OEUVRE OU DE MATIERE (AUTRE QUE CEUX QUI SONT INDIQUES DANS LES PRESENTES), ET VOTRE SEUL RECOURS, AU LIEU ET PLACE DE TOUS DOMMAGES-INTER-ETS, DOMMAGES EN DIRECTS, CONSECUTIFS, SPECIAUX OU AUTRES, SE LIMITERA A LA REPARATION OU AU REMPLACEMENT DECRISS CI-DESSUS. LES GARANTIES DECrites CI-DESSUS SONT FOURNIES AU LIEU ET PLACE DE TOUTE AUTRE DECLARATION OU GARANTIE, EXPLICITE OU IMPLICITE, DE QUELLE QUE NATURE QU'ELLE SOIT, CONCERNANT TOUT MATERIEL, Y COMPRIS ET SANS QUE CETTE LISTE SOIT LIMITATIVE, LES GARANTIES IMPLICITES DE QUALITE MARCHANDE ET D'ADAPTATION A UN OBJECTIF OU USAGE PARTICULIER. EN AUCUN CAS LA SOCIETE LEGACY NE SAURAIT ETRE RESPONSABLE POUR DES DOMMAGES-INTER-ETS, DOMMAGES INDIRECTS, CONSECUTIFS OU SPECIAUX D'AUCUNE SORTE SUR LA BASE D'UNE INOBSERVATION DE GARANTIE, D'UNE RUPTURE DE CONTRAT, D'UNE NEGLIGENCE, D'UNE RESPONSABILITE STRICTE OU DE TOUTE AUTRE THEORIE JURIDIQUE.

Sauf en cas de modification par écrit signée par les deux parties, la présente garantie limitée constitue l'accord complet et exclusif entre les parties, et remplace tout autre accord verbal ou écrit précédent, et toute autre communication entre les parties relative au domaine couvert par la présente garantie. Tout recours pour l'inobservation d'une garantie doit être intenté dans les 12 (douze) mois suivant la fin de la période de garantie.

*Si ce matériel comprend un tuyau flexible, celui-ci n'est garanti que pour 90 (quatre-vingt-dix) jours. Les autres éléments de ce matériel sont garantis pour 5 (cinq) ans conformément aux stipulations ci-dessus. Si l'acheteur remplace un tuyau flexible sur ce matériel par un autre non fabriqué par la société LEGACY, la garantie applicable à tout le matériel devient NULLE et NON AVENUE. Pour des instructions concernant la commande et l'installation, veuillez nous consulter à l'adresse service@legacymfg.com ou www.legacymfg.com.